

# PROPER MEASUREMENT TECHNIQUE FOR ORDERING QBOT DRIVE WIRES

Providing an attachment point measurement:

When taking an attachment point measurement, **DO NOT** add/subtract to account for the drive spool wrapping or tensioner. Measure to the nearest 1/8"


In this example, we are depicting an attachment point measurement of exactly 7". This is strictly for demonstration purposes so the entire span fits within a single photo.



measuring the span between the drive wire holders

## Example photos and measurement:

To take an attachment point measurement, extend a metal tape measure spanning the distance between mounting points. Begin at one drive wire holder (left) and span the distance to the other drive wire holder (right). Note the exact measurement.

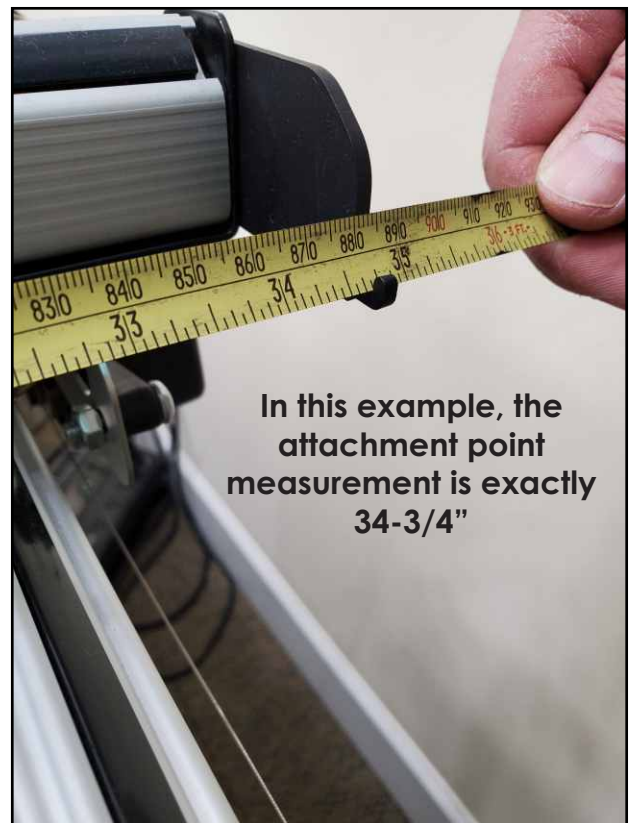

Drive wire holders are frame-specific and may be different from shown.